



Brewer Chimney Capper fitting instructions

Strap Model


A quick way to stop rain and bird entry to the unused chimney

- Prevents frost damage
- Easy to install
- Maintenance free
- Fits 150-250mm (6-10") internal pot sizes
- Prevents rain and bird entry
- Discourages soot fall
- Powder coated terracotta, black, buff or unpainted
- Easily removed should the chimney be required for use

Important: Only to be fitted to unused chimneys.

To fit the capper:

1. Place the capper centrally on the chimney pot.
2. Bend the legs down the outside face of the chimney.
3. Pass the stainless steel band around the legs.
4. Position the band approximately 50mm (2") above the lower edge of the legs.
5. Tighten the band with a flat bladed screwdriver, ensuring there is a 5mm (1/4") air gap between the underside of the capper and the top face of the chimney.
6. Bend bottom of legs back upwards over band.
7. Trim legs if necessary.

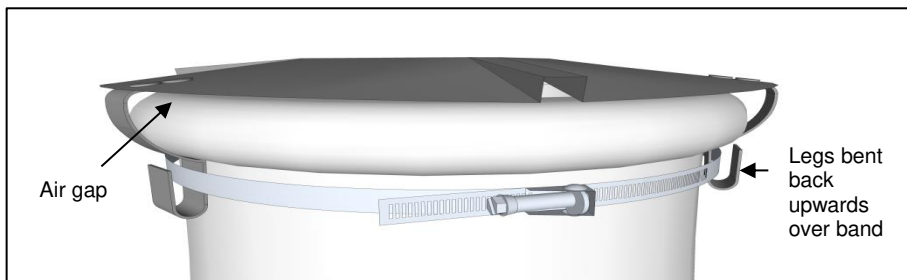

Technical Specifications

Model	Chimney Capper
Fitting range (internal chimney diameter)	150-250mm

Brewer Metalcraft Limited, Units C&D, Ford Lane Industrial Estate, Arundel, West Sussex, BN18 0DF
TEL 01243 539639 FAX 01243 533184 Email sales@brewercowls.co.uk www.brewercowls.co.uk



BRITISH MADE